

Zafety Lug Lock®*

Installation Instructions

Zafety Lug Lock® is designed to be used with 32, 33 or 38 mm nuts on 3 ½ stud centres, 32, 33 mm nuts on 4 1/8 inch stud centres or 22 or 25 mm nuts on 2 ½ inch stud centres. ²



Zafety Lug Lock®* creates resistance between two nuts to minimize their ability to rotate resulting in reduced risk of nut and wheel loss by securing the lug nuts together.

*Zafety Lug Lock® is a
Trademark and Patent Pending
of Tafcan Consulting Limited
*Canadian and PCT Application
Pending

Instructions:

1. Wheels and lug nuts must be installed as directed by the manufacturer's specifications.
2. Once the wheels and lug nuts are properly installed, Zafety Lug Locks are applied with the Zafety Lug Lock®* name visible.
3. Apply the units on adjacent nuts until they rest against the nut washer as shown in the picture.
4. Complete installation for all 10 nuts.
5. Follow all normal safety and maintenance inspections. ¹

¹ The installation of **Zafety Lug Lock®** does not preclude the need for standard safety & maintenance procedures

² *More sizes may be available please refer to measuring sheet to determine the size needed.*